



**Tala**

## Digital timer

Hour/minute timer with a loud beep • Counts upwards or downwards  
Clips on/stands/magnetic fixing • Complete with a single AAA type battery

### INSTRUCTIONS

#### To count down

1. Press Hour and Minute buttons to set desired amount of time.
2. Press Start/Stop button to start to count down.
3. Timer will start to count down then beep when the time is up.
4. Press Start/Stop button again to restart.
5. Press Reset button to stop the alarmbeeping.

#### To count upwards

1. Press Start/Stop button to start, the timer will begin counting upwards.
2. Press Start/Stop button to pause timer.
3. Press Start/Stop button again to restart.
4. Press Reset to stop the timer and reset the timer to zero.
5. The timer will count upwards to a maximum of 20 minutes.

To use the magnetic fixing option the white clip/stand has to be removed fully. This can be done just by sliding the white clip downwards.

### CARE AND USE

Carefully remove product from packaging • To clean, wipe with a damp cloth

Tala is a brand name of  
George East (Housewares) Ltd.  
1-5 Masterlord Ind Estate  
Leiston, England IP16 4JD  
[www.george-east.com](http://www.george-east.com)

Ref: 4213



5 012904 042135 >